



Disassembling Sony Cyber-shot DSC-T1

Removing Front Cover

This guide contains instructions on how to safely remove the front cover from your camera to access the internal parts.

Written By: iDeleted



INTRODUCTION

 
Removing the front cover is a necessary first step in disassembling the camera in order to repair or replace any internal parts.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Battery

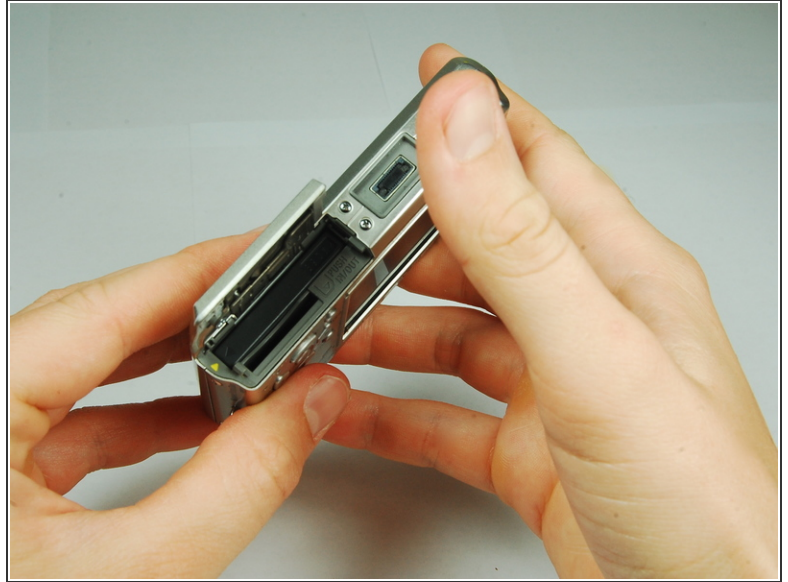

- Locate the battery cover on the bottom of the camera. Push down on the door and then, while pushing down, slide it back. It will pop open.

 Step 2

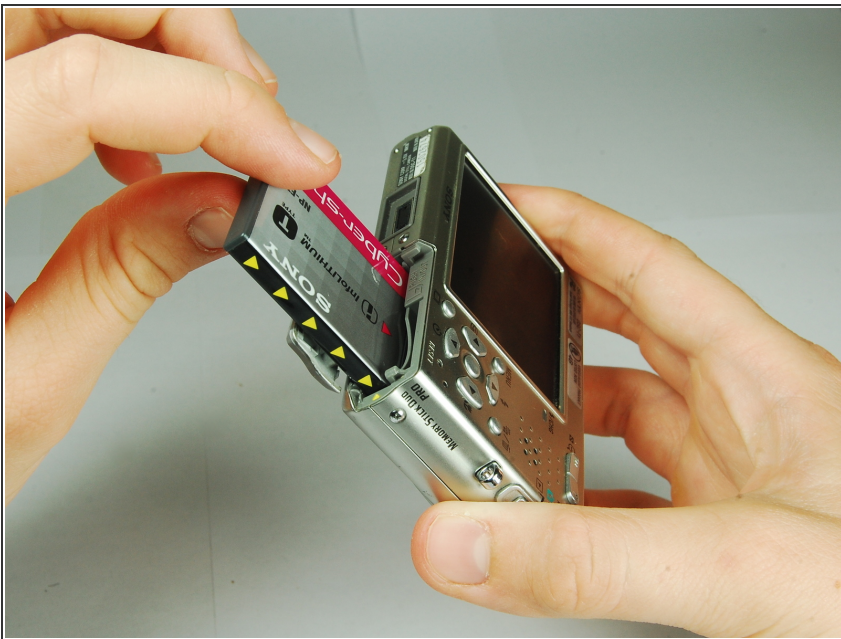


- Remove the exposed battery.

Step 3 — Removing Front Cover



- Use a PH00 screw driver to remove the six 2.9mm phillips screws holding the back cover in place. There are two screws on the left and right sides of the camera, and two screws on the bottom.

 Step 4

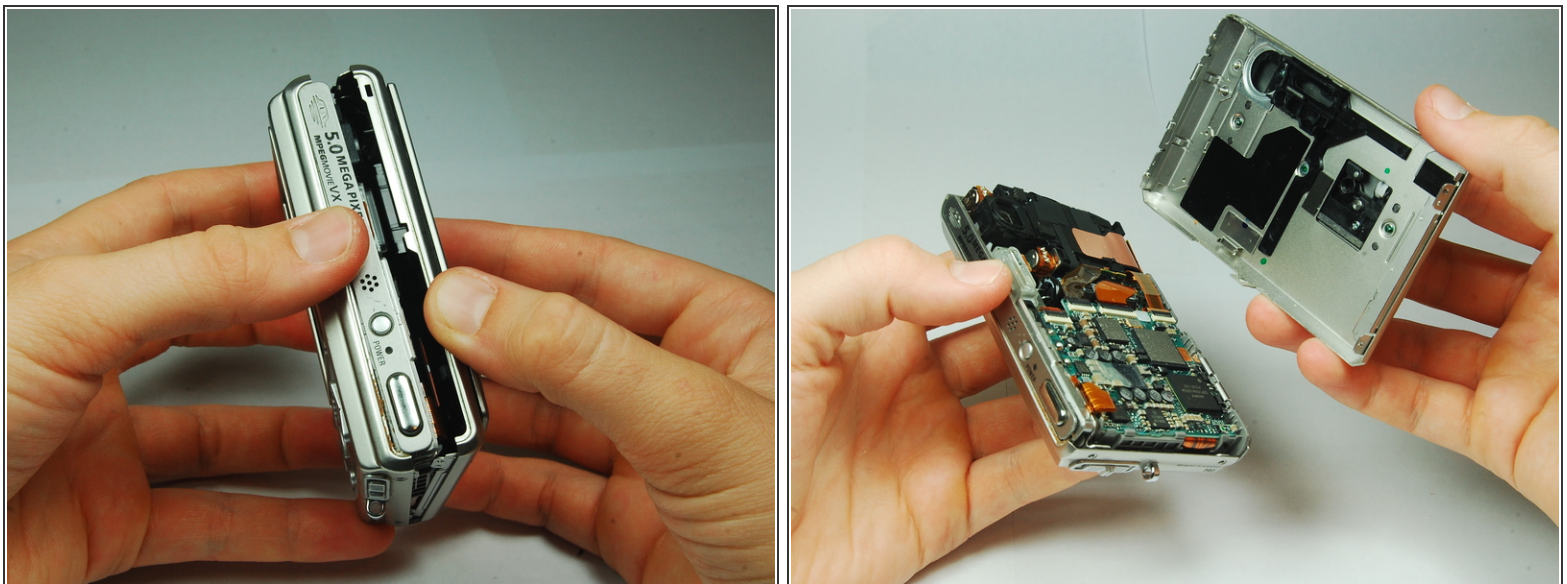

- Gently pry the front casing away from the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-28 04:18:57 PM.